


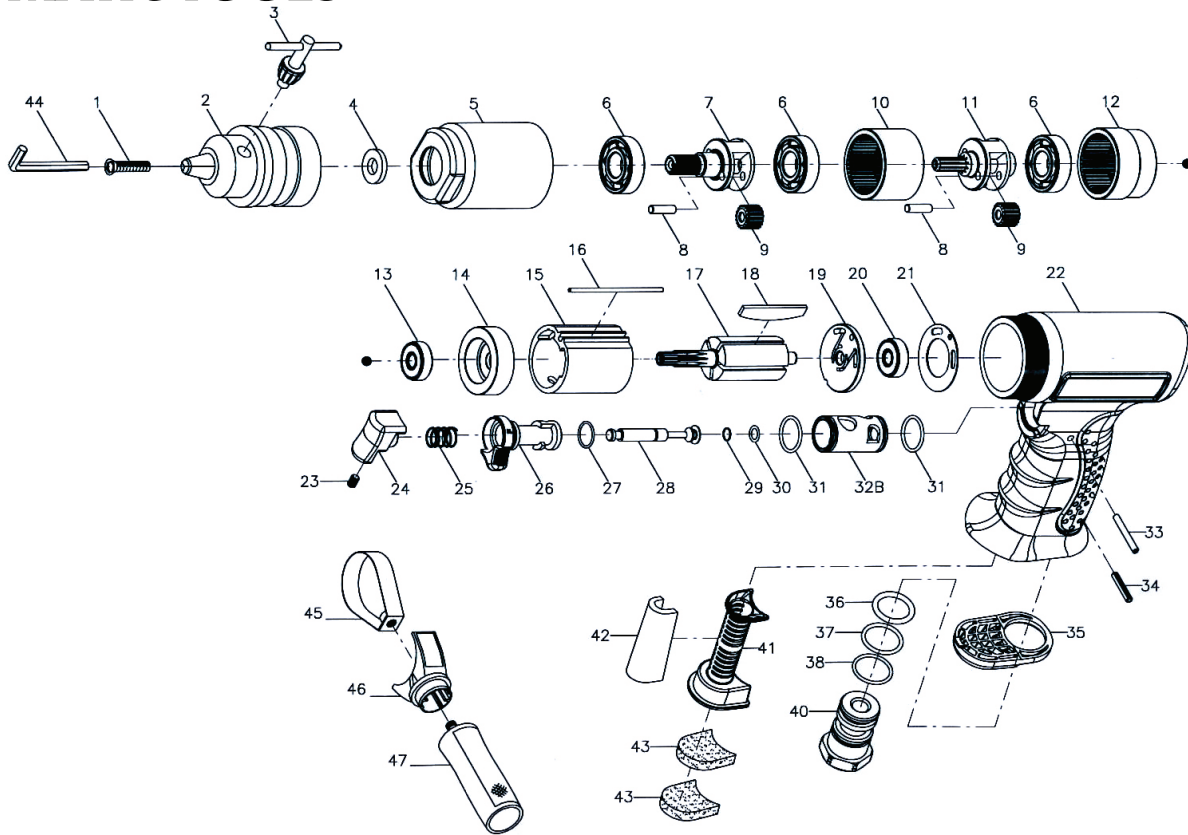

Ref #	Part Number	Description	Qty
1	00-0503	Screw (Left Thread)	1
2	612-002	Chuck (1/2")	1
3	612-003	Chuck Key	1
4	600R-031	Chuck Washer	1
5	616R-002	Clamp Nut	1
6	00-2338	Ball Bearing	3
7	616R-018	Gear Cage B	1
8	00-3413	Pin	4
9	616R-014	Idler Gear	4
10	616R-033	Idler Gear Housing B	1
11	616R-013	Gear Cage A	1
12	616R-015	Idler Gear Housing A	1
13	00-2332	Ball Bearing	1
14	616R-005	Front End Plate	1
15	600R-006	Cylinder	1
16	600R-022	Pin	1
17	616R-007	Rotor	1
18	600R-008	Rotor Blade	5
19	615R-009	End Plate	1
20	00-2347	Ball Bearing	2
21	600R-020	Motor Gasket	1
22	615R-001	Motor Housing	1
23	00-0605	Trigger Screw	1

Ref #	Part Number	Description	Qty.
24	615R-025	Trigger	1
25	615R-026	Spring	1
26	615R-021	Reverse Knob	1
27	00-41193	O-Ring	1
28	615R-035	Valve Stem	1
29	00-4190	O-Ring	1
30	00-41157	O-Ring	1
31	00-4121	O-Ring	2
32B	615R-024-B	Valve Sleeve	1
33	00-3456	Pin	1
34	00-3308	Spring Pin	1
35	243H-021	Exhaust Deflector	1
36	00-4126	O-Ring	1
37	00-4127	O-Ring	1
38	00-4143	O-Ring	1
41	615R-019B	Muffler Tube	1
42	615R-036	Muffler	1
43	615R-037	Muffler	2
44	00-3903	Hex. Wrench	1
45	766-026	Elastic Collar	1
46	766-025	Side Handle Frame	1
47	766-027	Side Handle	1